# Assembly

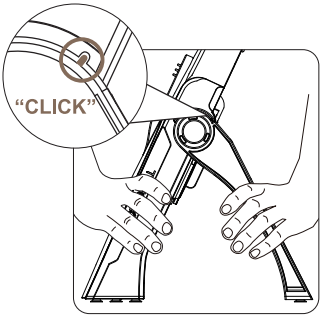


1. Fully unfold the slicer and place it on a flat, stable surface.

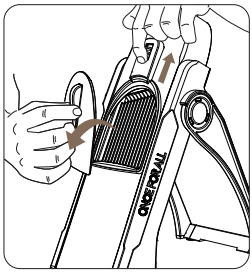


2. Pressing upward on the tab to lift the Chute Release.

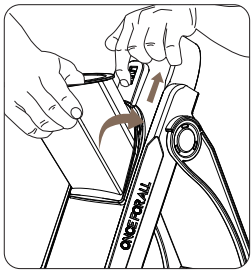


3. Pressing upward on the tab to lift the Chute Release again.

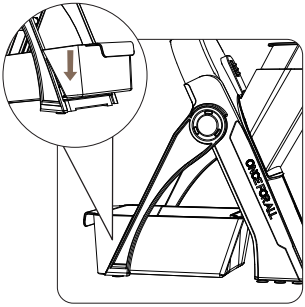


4. Put the Container

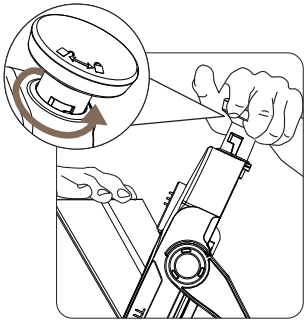

5. Unlock by turning the handle counterclockwise before use.

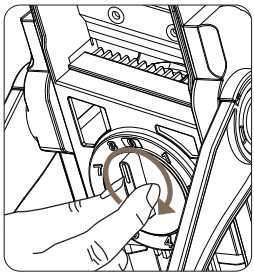

6. Turn the knob to select the function mode.

# Clean



**Dishwasher Safe**



**Hand Wash**

**WARNING:** NEVER insert your fingers in or near the Blade to dislodge food.

# Setting

- **Selecting Thickness**

  Turn dial (Thickness Adjuster) to set your desired slice thickness.

- **Adjustment Range:**

  0–8 mm (higher numbers = thicker slices).

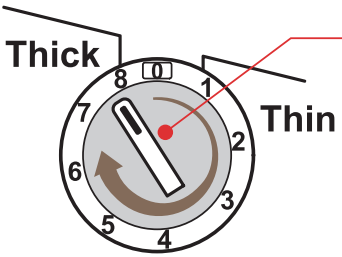


Thickness Adjuster

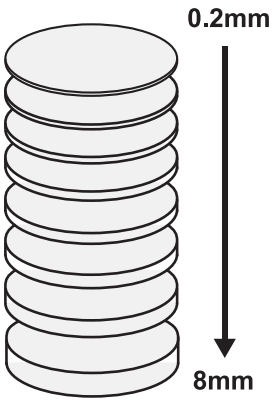


| THICKNESS CHART | |
|---|---|
| 0 | <1mm |
| 1 | 1mm |
| 2 | 2mm |
| 3 | 3mm(1/8″) |
| 4 | 4mm |
| 5 | 5mm |
| 6 | 6mm(1/4″) |
| 7 | 7mm |
| 8 | 8mm |