




Relax with Music, Sleep Soundly

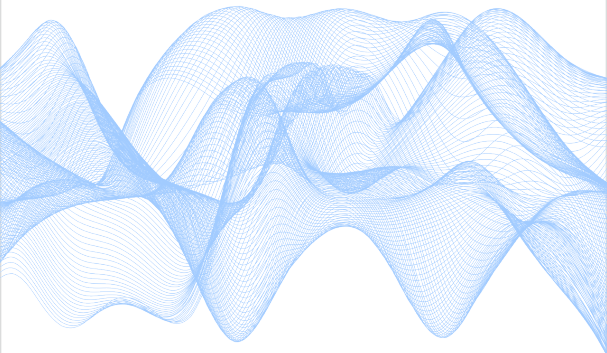

Bluetooth Sleep Mask User Manual

Product Specifications

Bluetooth Version: 5.4

Transmission Range: Up to 33 feet (10 meters)

Battery Capacity: 200mAh

Charging Time: Approximately 2 hours

Playback Time: Up to 14 hours

Standby Time: Up to 100 hours

Material: Soft, breathable fabric

Speaker Diameter: 32mm

Frequency Response: 20Hz - 20kHz

Weight: 170 grams

Compatibility: Compatible with most Bluetooth-enabled devices, including smartphones, tablets, and laptops.


Package Contents:

1*Bluetooth Sleep Mask

1*Type-C Charging Cable

1*User Manual

1*Portable Carrying Bag

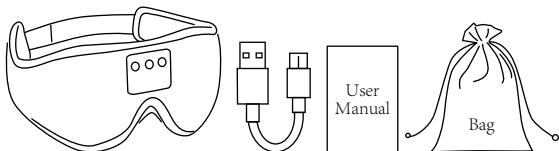

Preparation Before Use

Charging the Bluetooth Sleep Mask:

- Before using the Bluetooth Sleep Mask for the first time, ensure it is fully charged.
- Use the provided USB charging cable to connect the eye mask to a power source, such as a computer USB port or a USB wall adapter.
- The red LED indicator light will illuminate during charging and the blue LED indicator light will illuminate once the Bluetooth Sleep Mask is fully charged.
- It typically takes approximately 2 hours to charge the sleep mask fully.

Adjusting the Bluetooth Sleep Mask:

- Before wearing the Bluetooth Sleep Mask, adjust the strap to ensure a comfortable and secure fit around your head.
- Position the speakers over your ears for optimal audio experience without compromising comfort.



Additional Tips:

- For optimal performance and battery life, it is recommended to fully charge the Bluetooth Sleep Mask before each use.
- Keep the sleep mask away from water and moisture to prevent damage to the electronic components.

Operating Instructions



- ① The light will turn blue after fully charged
- ② Volume Down / Previous Track
- ③ Volume Up / Next Track
- ④ On / Off / Play / Pause / Answer

Power On/Off:

- To power on the Bluetooth Sleep Mask, press and hold the power button located on the front of the mask for approximately 3 seconds.
- The LED indicator will flash blue and red alternately, indicating that the sleep mask is powered on.
- To power off the sleep mask, press and hold the power button again until the LED indicator turns off.

Bluetooth Pairing:

- 1. Ensure Bluetooth is enabled on your device (e.g., smartphone, tablet).
- 2. Press and hold the power button until the LED indicator flashes blue and red alternately, indicating that the sleep mask is in pairing mode.
- 3. On your device, navigate to the Bluetooth settings and select "musiCozy" from the list of available devices to establish a connection.
- 4. Once paired successfully, the LED indicator will turn off.

Music Playback:

- **Play/pause music:** Press the power button (located on the front of the sleep mask) once to play or pause music playback.
- **Volume control:** Press the volume up (+) button to increase the volume, and press the volume down (-) button to decrease the volume.

Answering Calls:

- To answer an incoming call, press the power button once.
- To end a call, press the multi-function button again.


Skipping Tracks:

- To skip to the next track, press and hold the volume up (+) button for approximately 2 seconds.
- To go back to the previous track, press and hold the volume down (-) button for approximately 2 seconds.


Charging:

- Use the provided USB charging cable to connect the sleep mask to a power source (e.g., computer USB port, USB wall adapter) for charging.
- The LED indicator will illuminate during charging and turn off once the sleep mask is fully charged.


How to Remove the Speakers of the Bluetooth Sleep Mask

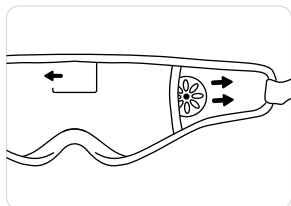

1. Locate the cutout on the side of the Bluetooth module. Slide the Bluetooth module out of the cutout carefully to expose the speakers.

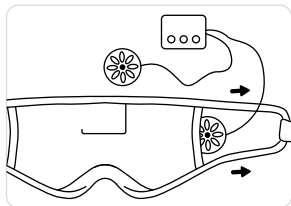

2. Gently pull on the cable connected to each speaker to remove them from the openings on the same side of the sleep mask.

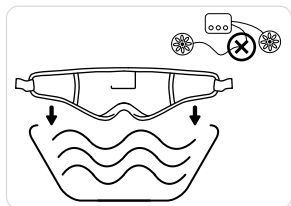

3. Once the speakers are removed, you can proceed to clean the sleep mask.

Note: Take care not to pull too hard on the cables to avoid damaging them or the speakers.

Q1: How long is the warranty?

A1: We provide a one-year warranty from the date of purchase for every product sold.

Q2: How can I reset the Bluetooth Sleep Mask if I encounter connectivity issues?

A2: To reset the Bluetooth Sleep Mask, press and hold the power button and volume up (+) button simultaneously for about 5 seconds until the LED indicator flashes blue and red alternately. Then, re-pair it with your device.

Q3: Can I adjust the volume of the Bluetooth Sleep Mask during a phone call?

A3: Yes, you can adjust the volume of the Bluetooth Sleep Mask during a phone call using the volume up (+) or volume down (-) buttons on the side of the mask.

Q4: How long does the battery of the Bluetooth Sleep Mask last on a single charge?

A4: The battery of the Bluetooth Sleep Mask can last up to 14 hours of continuous playback on a single charge, depending on usage and volume levels.

Q5: Can I use the Bluetooth Sleep Mask with other Bluetooth-enabled devices besides smartphones?

A5: Absolutely, the Bluetooth Sleep Mask is compatible with most Bluetooth-enabled devices, including smartphones, tablets, and laptops.

Q6: Can I use the Bluetooth Sleep Mask while it's charging?

A6: No, the Bluetooth Sleep Mask cannot be used while charging.

Q7: How do I know when the battery of the Bluetooth Sleep Mask is low?

A7: When the battery of the Bluetooth Sleep Mask is low, the LED indicator will flash red, indicating that it's time to recharge the device.

Q8: Can I adjust the position of the speakers in the Bluetooth Sleep Mask?

A8: Yes, you can adjust the position of the speakers within the mask to ensure optimal comfort and audio quality.

Q9: Is the Bluetooth Sleep Mask suitable for use in noisy environments?

A9: While the Bluetooth Sleep Mask can help block out ambient noise to some extent, it is not specifically designed for noise cancellation. For optimal results in noisy environments, consider adjusting the volume levels accordingly or using additional noise-canceling earplugs.

Q10: Can I adjust the brightness of the LED indicator light on the Bluetooth Sleep Mask?

A10: No, the brightness of the LED indicator light on the Bluetooth Sleep Mask cannot be adjusted. However, it is designed to provide a subtle indication of the device's status without causing discomfort during use.

Q11: The battery cannot be charged.

A11: If you encounter issues with charging the battery, please try using a different charging cable. If the problem persists, please contact us, and we will provide you with a replacement.

Q12: The speakers are broken, or one speaker has sound but the other one does not.

A12: Before washing, ensure to remove the speakers. If you encounter any issues with the speakers, please contact us for assistance. If it's a product quality issue, we'll be happy to send you a replacement.

- 1.** Charge the Bluetooth Sleep Mask by using the provided USB charging cable and avoid using incompatible chargers or power sources.
- 2.** Do not overcharge the battery or leave the Bluetooth Sleep Mask connected to the charger for extended periods, as this may degrade battery performance over time.
- 3.** If you plan to store the Bluetooth Sleep Mask for an extended period, ensure it is partially charged (around 50%) to prevent battery depletion.



The Bluetooth Sleep Mask cannot be used while charging.